



## Talos T6/T8™ Coupon Guide

Carefully cut coupon from this page or make one copy of this coupon.

Copies are usable if made on a standard, carbon-based copier. Make one copy of the original at a time, as copiers tend to reduce the size of the coupon when multiple copies are made.


Fill out the coupon using a #2 (HB) pencil. Fill in one block for each line. Do not mark the back of the coupon.

Note that Talos units are preconfigured with the following options enabled:

- Bill Ways Accepted: Four Way
- T6 Bills Enabled: \$1 - \$20
- T8 Bills Enabled: \$1 - \$100
- Pulse Width: Gaming Short
- Pulses Per Dollar: One
- Interface Mode: Harness Enable
- Acceptance Mode: Mode Zero

### Initiating Coupon Mode

1. Remove the bill magazine
2. Use a pencil or a screwdriver to press this button to enter configuration mode, then reattach the bill magazine to initiate Coupon mode:

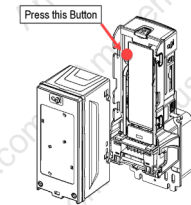

**When coupon mode is activated, the bezel lights will rapidly flash**

1. Insert a completed configuration coupon
2. Watch the bezel LEDs and count the flashes when the configuration coupon is returned
3. Use this chart to confirm successful programming:

| Flashes | Meaning   |
|---------|---|
| 10      | Configuration coupon accepted and unit successfully programmed.   |
| 1 - 5   | Coupon rejected. Number of flashes corresponds to the coupon section that was improperly filled out. Try again. |
| 7       | Coupon not read. Confirm the coupon correct and try again.  |




## FREE VEND COUPONS AND BILL PROGRAMMING

Follow the same process to program the Talos with bills or free vend coupons, but note that the LED codes are slightly different:

| Flashes | Meaning   |
|---------|---|
| 10      | The bill or vend coupon has been enabled successfully                     |
| 7       | The bill validator was unable to read the bill or vend coupon. Try again. |
| 3       | The bill or vend coupon has been disabled                                 |

## OTHER DOCUMENTATION

All support documentation, including a downloadable copy of this coupon, can be found at [Cranepi.com/support](http://Cranepi.com/support).

|   |   |   |   |                              |
|---|---|---|---|------------------------------|
| Scan  | Log in  | Tap Support   | Tap   | Tap                          |
|  |  |  | Add a Product                                   | View Downloads               |
|   | Login   | And select My Library   | Then<br>Use the filters or scroll to find Talos | Then<br>Choose your Document |

## COUPON SECTIONS

### SECTION 1 - BILL WAYS

1 - Face up in one direction (green seal first)

2 - Face up in either direction

4 - Face up or down in either direction

### SECTION 2 - BILL ENABLES

Fill in on or off to enable or disable a bill.

**\$50 and \$100 - T8 Models Only**

Fill in on or off to enable or disable a bill.

### SECTION 3 - PULSE WIDTH

Sets the width of the pulse, check with your machine manufacturer for details.

### SECTION 4 - PULSES PER DOLLAR

Credit pulses per dollar accepted, check with your machine manufacturer for details.

### SECTION 5 - INTERFACE MODE

**Harness Enable** - requires an input from the controller to enable and accept bills.

**Always Enable** - allows for acceptance at all times, a host or controller cannot disable the unit.

### SECTION 6 - ACCEPTANCE MODE

Mode 0 is default. Increasing Acceptance Mode increases security, but may also impact performance. Please contact CPI Technical Support for details.

Print actual size  
66mm

### Talos T6/T8 Coupon Guide



Sections 1-5 must be filled in. Section 6 is optional.

Bill ways accepted

**1**

1                      2                      4

Bill enables

on                      off

**2** **\$1**

**\$2**

**\$5**

**\$10**

**\$20**

**\$50 and \$100 for T800 models only**

**\$50**

**\$100**

Pulse Width

**3**

Gaming    Gaming    Vending    Vending  
Short      Long      Short      Long

Pulses per Dollar

**4**

1                      2                      3                      4

Interface Mode

**5**

Harness    Always  
Enable      Enable

Acceptance mode (section is optional)

**6**

Mode 0    Mode 1    Mode 2    Mode 3



156mm



Cut carefully on the dotted line. The coupon should be the same size as an American bill when complete.